

CHANGING THE INLET SEAL

DEPEND-O-DRAIN, INC. MDB3 AND MDB3RA STYLE VALVE HOUSING

1)



Remove the 4 screws from around the inlet.

2)



Remove the inlet from the housing by twisting the inlet counterclockwise about 90°.

3)



Remove the inlet seal from the valve housing by lifting it out of the pocket

4)



Insert the new seal into the seal pocket with the "J" lip side to the inside of the housing.

5)




Apply grease to the seal interface face of the inlet. Make sure grease is applied across the face and into the seal rib groove.


6)



Insert the inlet into the seal pocket and rotate the inlet clockwise about 90° until it will not rotate further to align the inlet screw boss ears and housing screw bosses.

7)

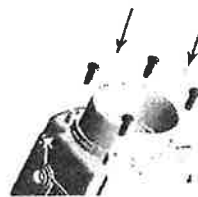

Reinstall the 4 screws to lock the inlet in place on the housing. These screws only need to be driven snug. **DO NOT OVERTIGHTEN THESE SCREWS** 

Part Number 900439; Rev. A